


Hold the hose assembly as if you are looking into a telescope.

Position the elbow at the far end at 12 o'clock (straight up).

Identify the position of the **closest** elbow fitting according to the examples below.

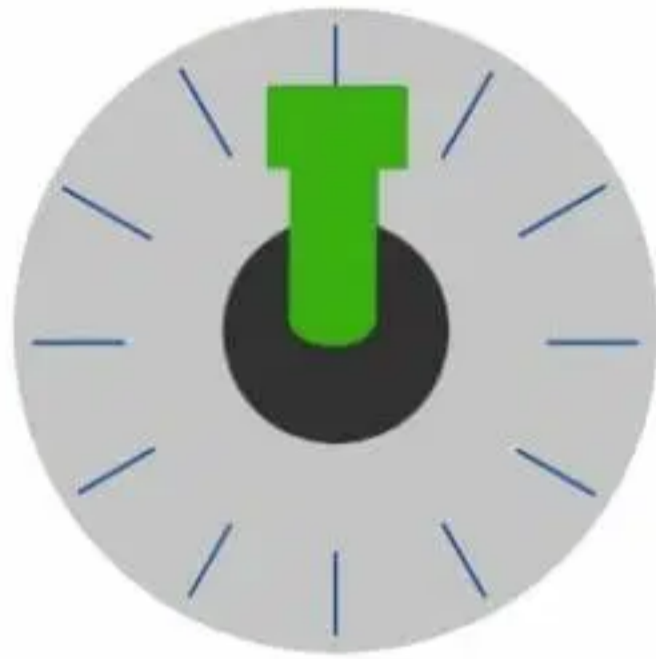


12-12


(fittings aligned)




12-1

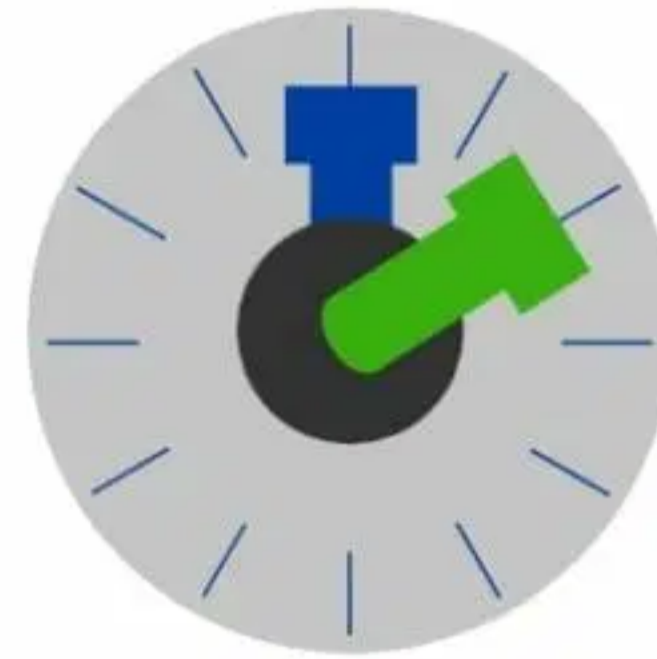

12-2

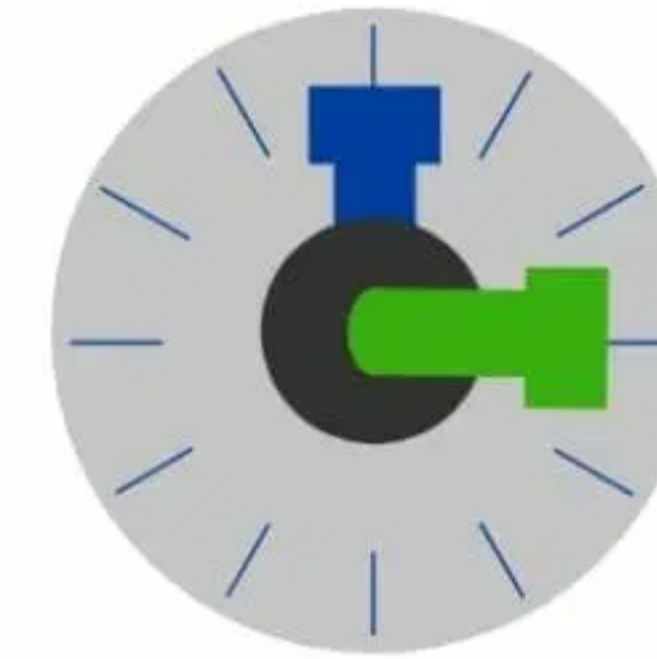


12-3

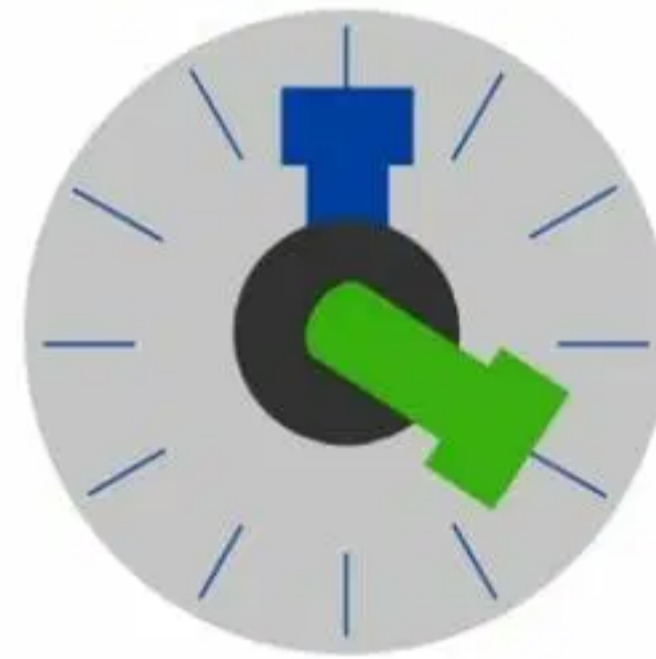


12-4




12-5

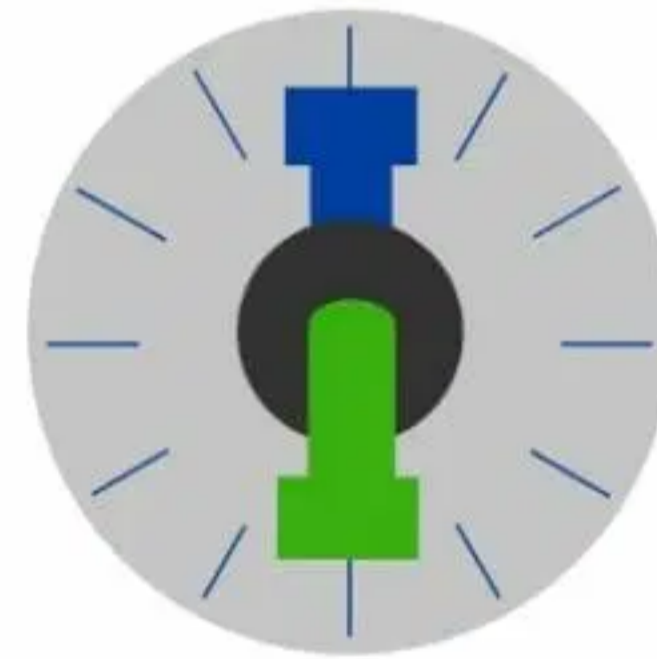


12-6

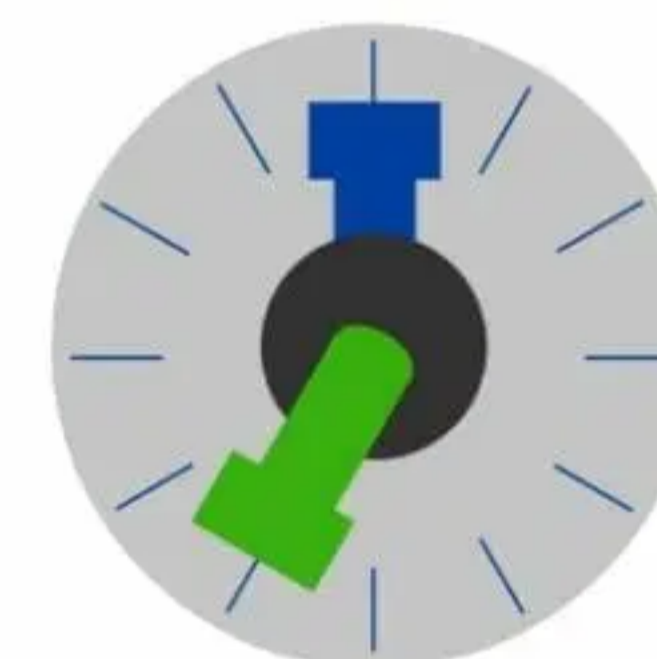

12-7

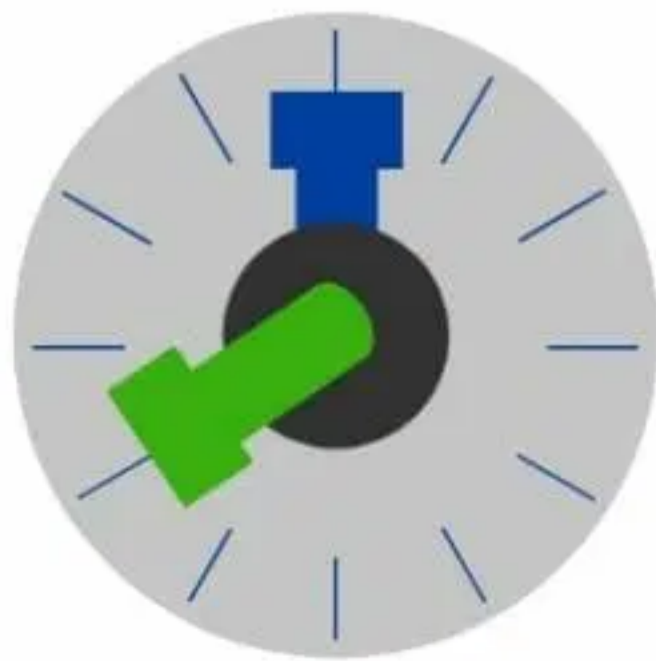


12-8

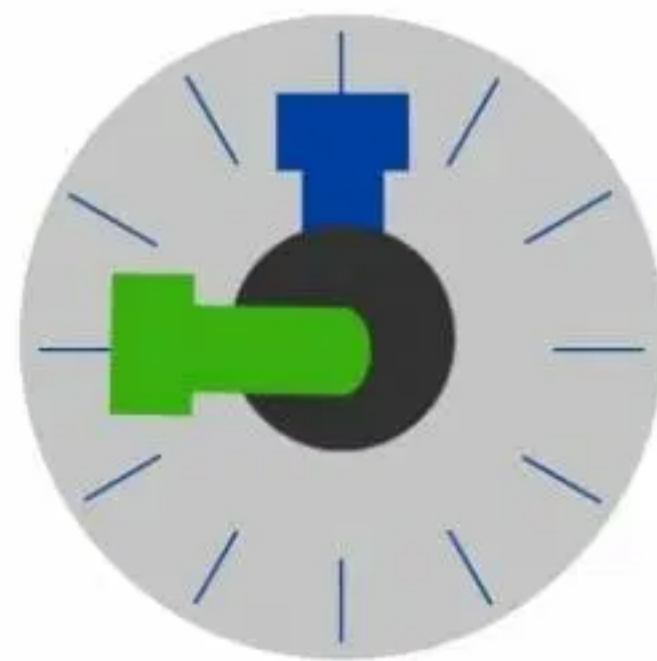

12-9



12-10

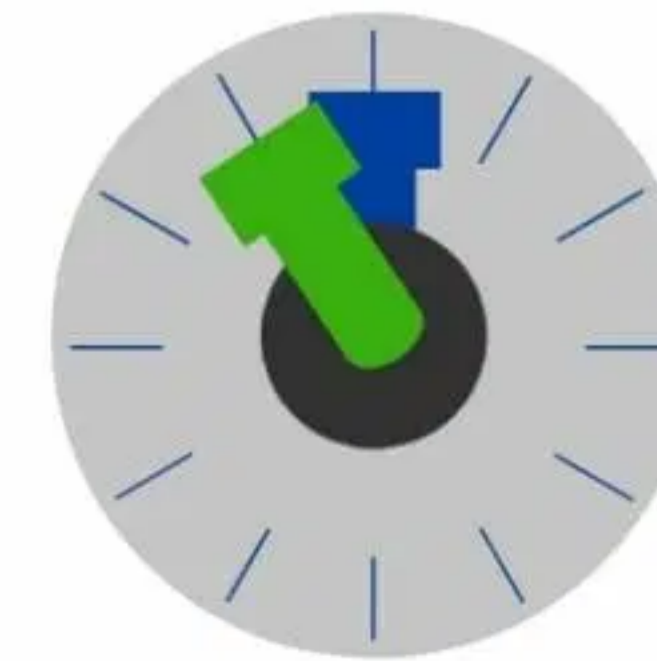

12-11